


Instruction Manual

1 Button Choice-of-Voice Analog Talking Watch

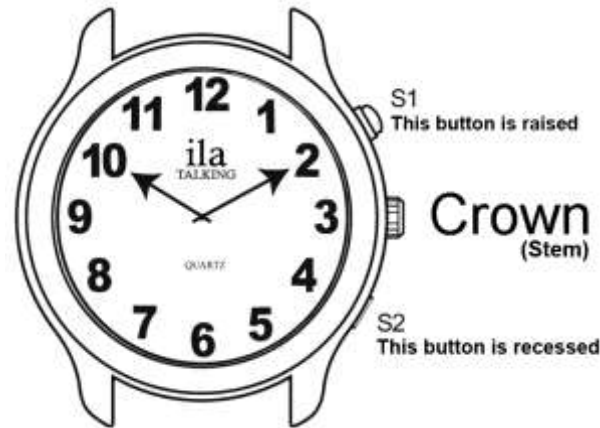

PLEASE NOTE...DO NOT TOUCH OR PULL THE STEM OF THE WATCH. READ THESE INSTRUCTIONS THROUGH TO THE END BEFORE YOU ATTEMPT TO SET THE WATCH!

Upon receiving your watch, take note that the face of the watch will be running and the winding stem will be pushed in. Please do not pull out the winding stem to set the face, as, after setting the voice mechanism of the watch, the hands will automatically synchronize and set themselves.

Your new **Talking Watch** uses a real voice that automatically synchronizes to the analog watch face. The watch contains only one battery and one quartz crystal inside in order to maintain the timekeeping for both the voice and the watch hands. The time should always be set by following the instructions through the talking mechanism of the watch and **NOT** the watch hands.

About the Buttons

The 2 o'clock button (S1) is raised and can be pressed with a finger.

The 4 o'clock button (S2) is flush with the case. There is a small depression in the center of it. Please take caution when using a ball point pen, paper clip, or similar object to depress the button.

Button Functions

Time and Day/Date Announcement

Press the 2 o'clock button (S1) once to speak the Time. The watch will speak the Hour and Minute.

Press the 2 o'clock button (S1) again, after hearing the time spoken, to hear the Day, Month, Date, and Year.

Choice of Voice Selection (male/female)

This watch speaks in either a male or female voice. Press and hold the 2 o'clock button (S1) until the selected voice (male or female) announces the current time setting or calendar data.

Time Setting and Watch Hands Synchronization

Set Time

Time is always set when setting the VOICE FUNCTION! DO NOT set the time with the winding stem (crown).

1. Press the 4 o'clock button (S2) once. The watch will announce, "Set Time, Press 2 o'clock button (S1) to Set."
2. Press the 2 o'clock button (S1) to confirm that Time Change is desired. The watch will announce, "Press 4 o'clock button (S2) to Set Hour, 2 o'clock button (S1) to confirm."
3. Press the 4 o'clock button (S2) to change the Hour. **Note:** An AM or PM indicator will appear on the face of the watch after the choices are announced.
4. Press the 2 o'clock button (S1) to confirm the hour chosen. The watch will announce, "Press 4 o'clock button (S2) to Set Minute, 2 o'clock button (S1) to confirm."
5. Press the 4 o'clock button (S2) to change the Minute.
6. Press the 2 o'clock button (S1) to confirm minute chosen. The watch will announce, "Confirm. X:xx pm. Please Wait."

Please Note: The hands of the clock will now spin forward to match the time just entered. **This may take as long as 5 minutes.** The second hand will keep spinning. **DO NOT INTERRUPT THE PROCESS!** When synchronized, the second hand stops spinning.

Set Date

1. Press the 4 o'clock button (S2) twice. The watch will announce, "Set Date, Press 2 o'clock button (S1) to set."
2. Press the 2 o'clock button (S1) to confirm that Date Change is desired. The watch will announce, "Press 4 o'clock button (S2) to Set Year, 2 o'clock button (S1) to confirm."
3. Press the 4 o'clock button (S2) to change Year.
4. Press the 2 o'clock button (S1) to confirm Year chosen. The watch will announce, "Press 4 o'clock button (S2) to Set Month, 2 o'clock button (S1) to confirm."
5. Press the 4 o'clock button (S2) to change Month.
6. Press the 2 o'clock button (S1) to confirm Month chosen. The watch will announce, "Press 4 o'clock button (S2) to Set Date, 2 o'clock button (S1) to confirm."
7. Press the 4 o'clock button (S2) to change Date.
8. Press the 2 o'clock button (S1) to confirm Date chosen. The watch will announce, "Press 4 o'clock button (S2) to Set Day of the Week, 2 o'clock button (S1) to confirm."
9. Press the 4 o'clock button (S2) to change Day of Week.
10. Press the 2 o'clock button (S1) to confirm Day of Week chosen. The watch will announce, "Confirm; announcing date."

TROUBLESHOOTING:

- **If the time announcement is different from the analog display of the watch face ...**

You need to synchronize the watch hands to match with the time announcement.

Review "Manually Synchronize Hands to Match Time Announcement" as shown below.

Manually Synchronize Hands to Match Time Announcement (Requires Sighted Assistance)

1. Pull out the stem of the watch when the second hand lands on 12:00:00 o'clock so that the second hand stops at 12 o'clock. If you miss the 12 o'clock mark, you must wait for the next chance. The second hand will stop moving when the stem is pulled out.
2. Turn the stem of the watch to set the Hour and Minute hands to point at 12 o'clock.
3. Now Hour, Minute, and Second hands should all be pointing at 12 o'clock with the stem still pulled out.

4. Hold the 2 o'clock button (S1) for more than 5 seconds with the stem in 'out' position. After 5 seconds, push in the stem.
5. The watch hands will start to spin to match the set announced time. **This may take a few minutes.**
6. After the watch resumes normally, check to see if the time announcement and watch hands are synchronized by pressing the 2 o'clock button (S1) once. If they are synchronized, you have successfully set the watch. If not, repeat Steps 1 through 6.

Battery Change

There is only one CR2025 battery inside the watch. This battery is used to drive both the voice announcement as well as the analog movement.

When you need to change the battery, it is best to go to a trained jeweler or watch specialist to avoid any damage to the watch.

1. Carefully open the back case of the watch and make sure you do not tamper with it.
2. Remove the battery spring on the right.
3. Remove the old battery and insert a fresh, new CR2025 battery. The battery polarity should be positive (+) side up.
4. Replace the battery spring down.
5. Before closing the case back, make sure the seal is correctly in place.

NOTE: After a battery is replaced, the time and date of your watch must be set and then the watch hands must be synchronized with the voice.

Contact ILA for a Replacement Battery

ILA will change your battery within the first two years from the date of purchase for a fee of \$24.95 which includes return postage. If you would like to change your own battery, or if it is beyond the two-year limit, a new battery may be purchased for \$1.99 plus handling and shipping of \$1.50 per order.